

Insert Sizing Gauge Set; 4, 5, 6, 6-W, 7, 7-W 8, 9, 10



Bead "Gate"

If bead of tire can be inserted completely into bead gate then the insert is the correct size

Correct fit !



1. Tire is tight around the Gauge
2. Bead inserts into the gate

Insert is too small



1. Tire beads too close
2. Bead misses the gate

Insert is too big !



1. Tire beads below gate, cannot fit in
2. Beads too far apart