



Tire Bead Removal Instruction



Step 1:
Pour the bead butter between the rim and the tire.



Step 2:
Insert the spoon lever and push down to increase the space.



Step 3:
Insert the tire lever, will feel "click" when lock on the bead.



Step 4:
Repeat the above two steps in different places.
Dismount bead using three levers simultaneously to unlock.